


D-Link DWR-921

- Connect a device to your router using an Ethernet cable or Wi-Fi and the default Wi-Fi key is written on the backside of router



- Open your web browser and type the default IP Address in the address bar 192.168.0.1
- You should now see the router login page with 2 text fields where you can type router's username and password
- Type Username admin and Password admin or keep password blank then click login

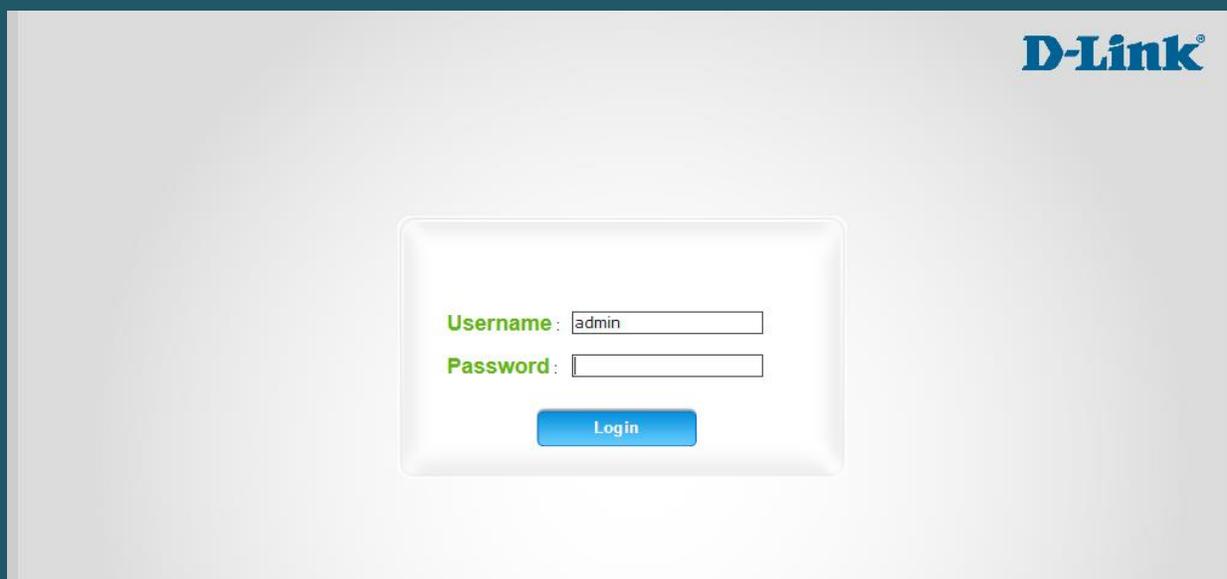

- To modify wireless settings click Wi-Fi on the top middle of interface then go to Wi-Fi Settings on the left side
- In Wireless Network Name textbox type the new Wi-Fi name
- Make sure Security mode is WPA-Personal and WPA mode is WPA2 only
- In Pre-Shared Key type Wi-Fi password (safest passwords are long and contain at least 8 digits of mixed letters, number)
- Click Apply to save changes

D-Link

Home Internet **Wi-Fi** LAN Advanced System

English

- Device List
- **Wi-Fi Settings**
- WPS
- Wi-Fi Advanced

WiFi Setting

In this section you can configure the wireless interface (access point) available on the router.

2.4G

Wireless Band : **2.4GHz Band**

Enable Wireless :

Wireless Network Name : (Also called the SSID)

802.11 Mode :

Enable Auto Channel Scan :

Wireless Channel :

Channel Width :

Visibility Status : Visible Invisible

Security Mode :

WPA Mode :

Cipher Type :

Pre-Shared Key :
(8-63 ASCII or 64 HEX)