


Huawei EG8145V5


- Connect a device to your modem router using an Ethernet cable or Wi-Fi , in case you want to use a cable you have to assign a static IP on your computer and concerning Wi-Fi default name and password are written on the back of machine
- Open your web browser and type the default IP Address in the address bar 192.168.18.1
- You should now see the router login page with 2 text fields where you can type router's username and password

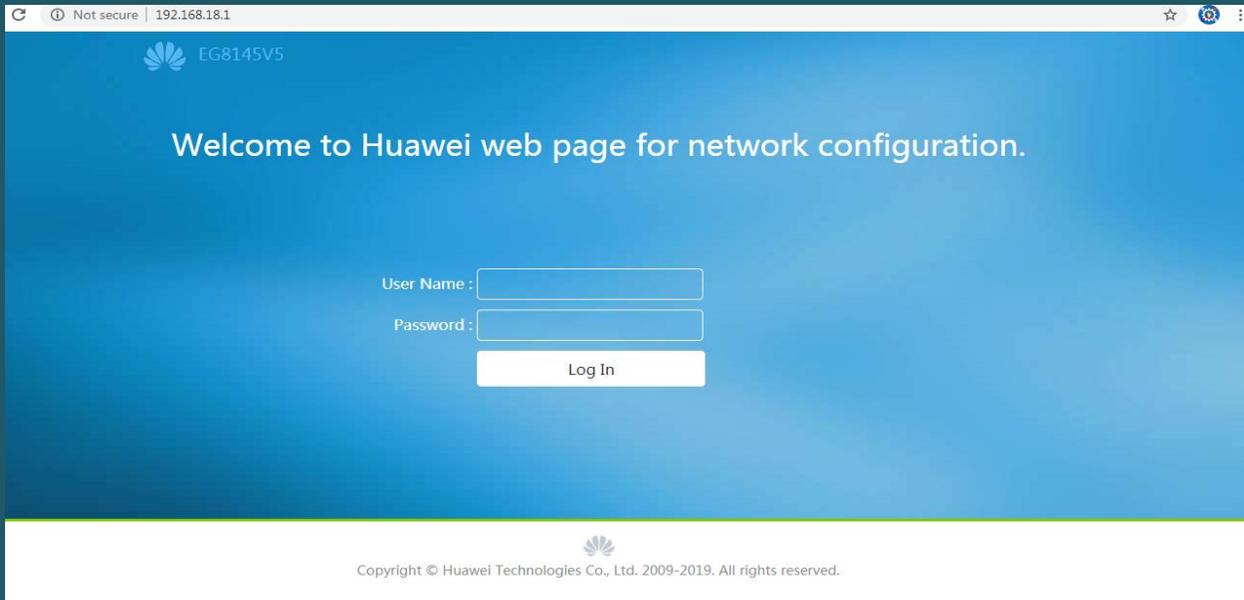


- The default username and password for your modem are written on the back of machine as below screenshot (Username :Ebuster Password:userEP)



- In case service provisioning method page opened please select “On the ONT web page” and click Next

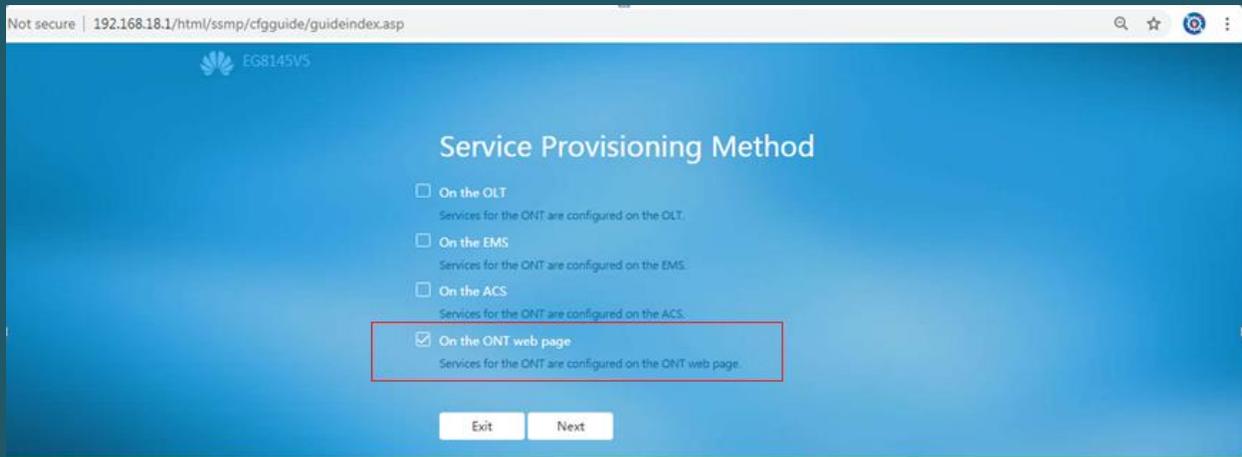

- Click advanced configuration
- Expand WLAN tab and choose 2.4G Basic Network Settings. (If you want to configure 5G Wi-Fi, choose 5G Basic Network Settings.)

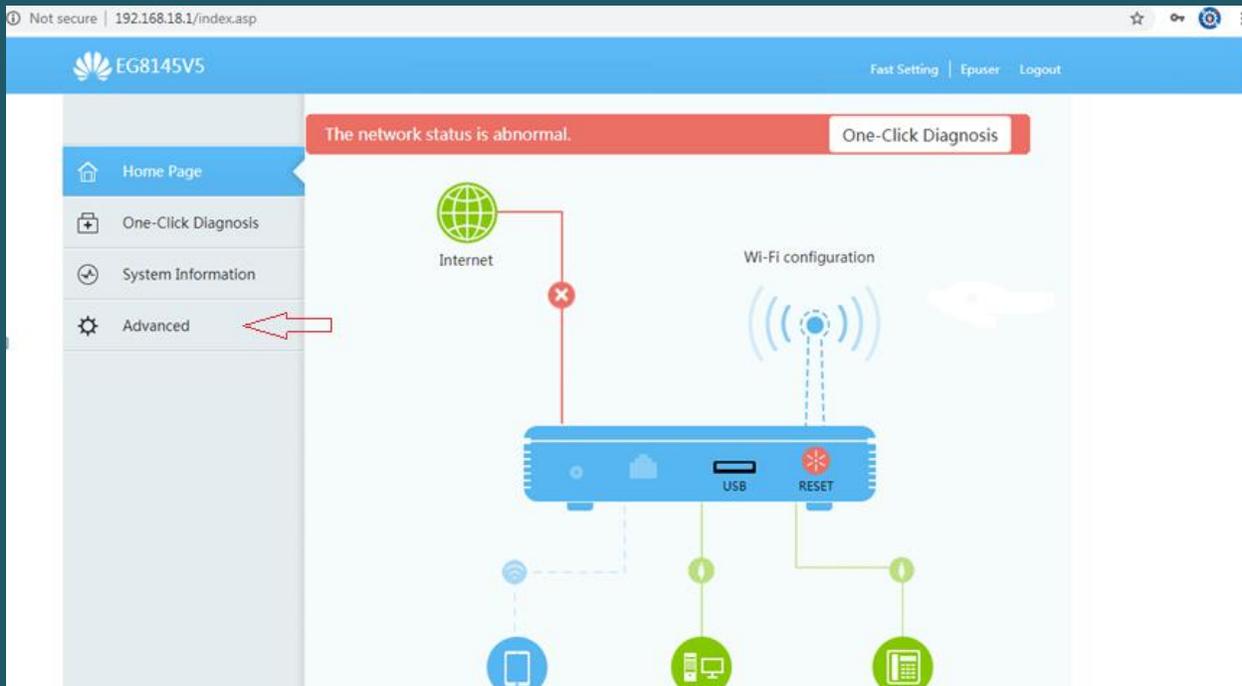

- In SSID Name textbox type WIFI Name and make sure Authentication mode is WPA/WPA2 Pre-shared Key
- In WPA Pre-shared Key textbox type the password of WIFI (safest passwords are long and contain at least 8 digits of mixed letters, number)
- Click Apply to save changes

Caution:
 1. Wireless network services may be interrupted temporarily after you modify wireless network parameters.
 2. It is recommended that you use the WPA2 or WPA/WPA2 authentication mode for security purposes.

Enable WLAN

New Delete

SSID Index	SSID Name	SSID Status	Number of Associated Devices	Broadcast SSID	Security Configuration
<input type="checkbox"/> 1	HUAWEI-2.4G-2qEK	Enabled	32	Enabled	Configured

SSID Configuration Details

SSID Name: * (1-32 characters)

Enable SSID:

Number of Associated Devices: * (1-32)

Broadcast SSID:

Enable WMM:

Authentication Mode:

Encryption Mode:

WPA PreSharedKey: Hide * (8-63 characters or 64 hexadecimal characters)

WPA Group Key Regeneration Interval: *(600-86400s)

Enable WPS:

WPS Mode:

PBC: