

Asus DSL-N14U & DSL-AC55U

- Establish a connection between the device and the router via network cable or Wi-Fi
- Open a browser and type 192.168.1.1 in the address bar
- You will be prompted to enter Username: admin and Password: admin or admin1234



- After logging in go to Advanced Settings then click Wireless
- In SSID textbox type Wireless Name then Select WPA2-Personal as Authentication Method
- In WPA Pre-Shared Key type Wi-Fi Password then click Apply (safest passwords are long and contain at least 8 digits of mixed letters, and numbers)

- General
- Network Map
- Guest Network
- Traffic Manager
- Parental Controls
- USB Application
- AiCloud
- Advanced Settings
 - Wireless
 - LAN
 - WAN
 - IPv6

- General
- WPS
- WDS
- Wireless MAC Filter
- RADIUS Setting
- Professional

Wireless - General

Set up the wireless related information below.

SSID	GEORGE	←
Hide SSID	<input checked="" type="radio"/> Yes <input type="radio"/> No	
Wireless Mode	AUTO <input checked="" type="checkbox"/> b/g Protection	
Channel bandwidth	20/40 MHz	
Control Channel	AUTO	
Extension Channel	AUTO	
Authentication Method	WPA2-Personal	←
WPA Encryption	AES	
WPA Pre-Shared Key	1234567890	←
Network Key Rotation Interval	3600	

Apply

←