


D-Link 2878AL ADSL/VDSL


Please follow the below steps to modify Wi-Fi settings of D-Link 2878AL modem

- Establish a connection between the device and the router via network cable or Wi-Fi
- Open a browser and type 192.168.1.1 in the address bar
- You will be prompted to enter the administrator password which is found printed on the backside of the modem

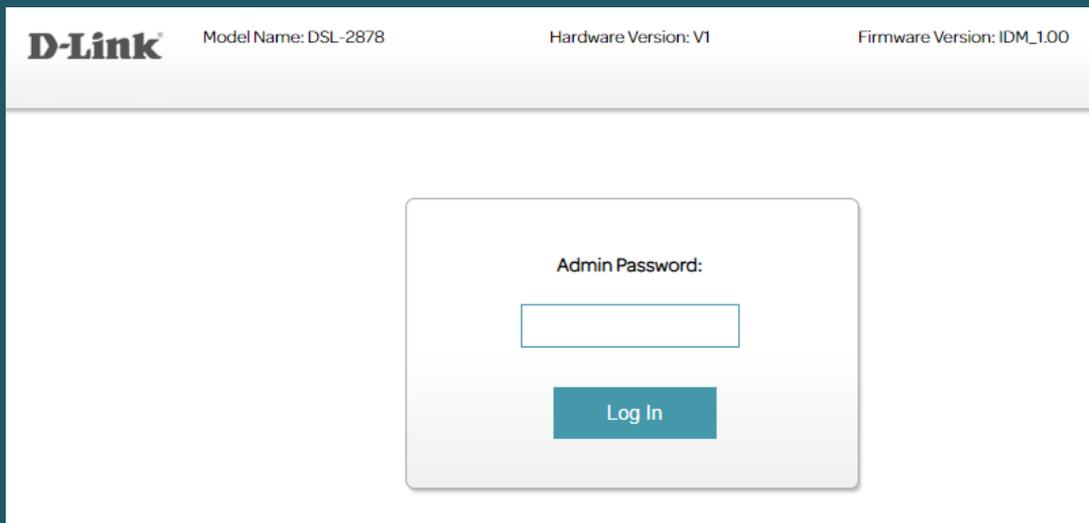

The image shows the D-Link login page. At the top, the D-Link logo is on the left, and the text 'Model Name: DSL-2878', 'Hardware Version: V1', and 'Firmware Version: IDM_1.00' is on the right. In the center, there is a box with the text 'Admin Password:' above a text input field. Below the input field is a blue button labeled 'Log In'.

- Click on the setting tab and select Wireless

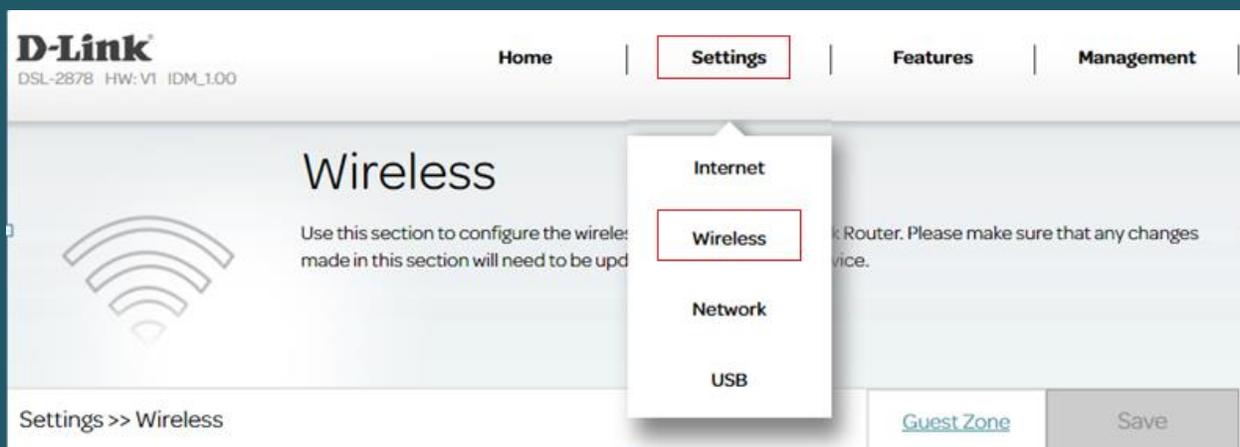

The image shows the D-Link Wireless settings page. At the top, the D-Link logo is on the left, and the text 'DSL-2878 HW: V1 IDM_1.00' is on the right. Below the logo, there are navigation tabs: 'Home', 'Settings', 'Features', and 'Management'. The 'Settings' tab is highlighted with a red box. Below the tabs, there is a large heading 'Wireless' and a sub-heading 'Use this section to configure the wireless settings of the Router. Please make sure that any changes made in this section will need to be updated on the Router.' To the left of the text is a Wi-Fi signal icon. Below the text, there is a dropdown menu with options: 'Internet', 'Wireless', 'Network', and 'USB'. The 'Wireless' option is highlighted with a red box. At the bottom left, there is a breadcrumb 'Settings >> Wireless'. At the bottom right, there are two buttons: 'Guest Zone' and 'Save'.

- In SSID Name textbox type WIFI Name then Password of 2.4 and 5GHz (safest passwords are long and contain at least 8 digits of mixed letters, and numbers)
- Once changes are done please click Save

Settings >> Wireless [Guest Zone](#)

2.4GHz

Status:

SSID:

Password:

[Advanced Settings...](#)

5GHz

Status:

SSID:

Password:

[Advanced Settings...](#)