


Linksys XAC-series

- Establish a connection between the device and the router via network cable or Wi-Fi
- Open your web browser and type the default IP Address 192.168.1.1 in the address bar

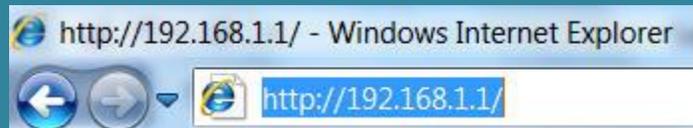

- Enter admin then click Sign In to access router interface



- On the left navigation pane, look under Router Settings, and select Wi-Fi Settings.

LINKSYS™ Smart Wi-Fi
Wireless

View and change router settings

Wireless | MAC Filtering | Wi-Fi Protected Setup

2.4 GHz network | Edit

Network: Enabled

Network name (SSID): Linksys00009

Password: 19f0d4aprK

Network mode: Mixed

Security mode: WPA2 Personal

Channel width: Auto

Channel: Auto

Broadcast SSID: Enabled

5.0 GHz network | Edit

Network: Enabled

Network name (SSID): Linksys00009_5GHz

Password: 19f0d4aprK

Network mode: Mixed

Security mode: WPA2 Personal

Channel width: 80 MHz

Channel: Auto

Broadcast SSID: Enabled

Ok Cancel Apply

- Click Edit then type in Network Name (SSID) the desired name of Wi-Fi and in Password textbox the password
- Make sure security mode is WPA2 Personal then click Apply and OK to save changes

Wireless

View and change router settings

Wireless | MAC Filtering | Wi-Fi Protected Setup

2.4 GHz network | Edit

Network: Enabled

Network name (SSID):

Password:

Network mode:

Security mode:

Channel width:

Channel:

Broadcast SSID: Enabled

5.0 GHz network | Edit

Network: Enabled

Network name (SSID): Linksys00009_5GHz

Password: 19f0d4aprK

Network mode: Mixed

Security mode: WPA2 Personal

Channel width: 80 MHz

Channel: Auto

Broadcast SSID: Enabled

Ok Cancel Apply