

Netis DL43 Series

- Establish a connection between the device and the router via network cable or Wi-Fi
- Open your web browser and enter **http://192.168.1.1** in the browser address bar
- Type Username: guest and password: guest to login to modem's interface

ADSL Router Login

User Name:

Password:



- After logging in , click Setup then expand WLAN directory
- Click basic settings to modify wireless name or channel number
- In SSID textbox type the name of wireless connection then click Apply

netis Select Language: English

Status Quick Start **Setup** Advanced Service Firewall Maintenance

Wireless Basic Settings
This page is used to configure the parameters for your wireless network.

Disable Wireless LAN Interface

Band: 2.4 GHz (B+G+N) Mode: AP SSID: netis

Channel Width: 40MHZ Control Sideband: Upper

Channel Number: Auto Current Channel: 8 Radio Power (Percent): 100%

Associated Clients: Show Active Clients

Apply Changes

- Click security to change wireless password
- Make sure Encryption is WPA2(AES) or WPA2(TKIP) and WPA Authentication Mode is Personal (Pre-shared Key)
- Make sure Pre-Shared Key Format is Passphrase then type in Pre-Shared Key textbox Wi-Fi password (safest passwords are long and contain at least 8 digits of mixed letters, and numbers)
- Once wireless settings are modified , click Apply Changes

Status Quick Start **Setup** Advanced Service Firewall Maintenance

Wireless Security Setup
This page allows you setup the wireless security. Turn on WEP or WPA by using Encryption Keys could prevent any unauthorized access to your wireless network.

SSID TYPE: Root VAP0 VAP1 VAP2 VAP3

Encryption: WPA2(AES) Set WEP Key

Use 802.1x Authentication WEP 64bits WEP 128bits

WPA Authentication Mode: Enterprise (RADIUS) Personal (Pre-Shared Key)

Pre-Shared Key Format: Passphrase

Pre-Shared Key: password

Authentication RADIUS Server: Port 1812 IP address 0.0.0.0 Password

Note: When encryption WEP is selected, you must set WEP key value.

Apply Changes